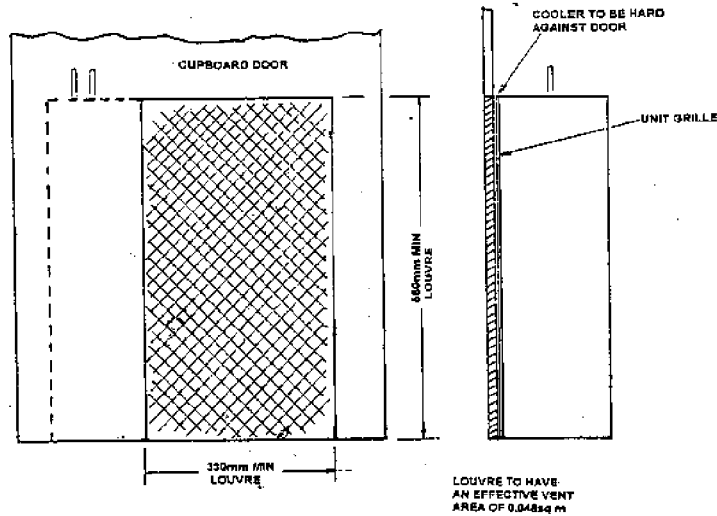


**INSTALLATION INSTRUCTIONS - MODEL: WR45****VENTILATION**

Where the unit is being installed in a cupboard or an enclosed space, it is essential that sufficient ventilation is provided to carry heat away from it.

The following vent layout pictured below is required:

**FREE STANDING**

Where the unit is being installed in a free standing situation, allow 100mm of free space on all sides of the cooler, with a minimum 300mm above the unit.