


**INSTALLATION INSTRUCTIONS - MODEL: UB1**

**1) VENTILATION**

Where the unit is being installed in a cupboard or enclosed space, it is essential that sufficient ventilation is provided to carry heat away from it.

The following vent layout pictured below is required:

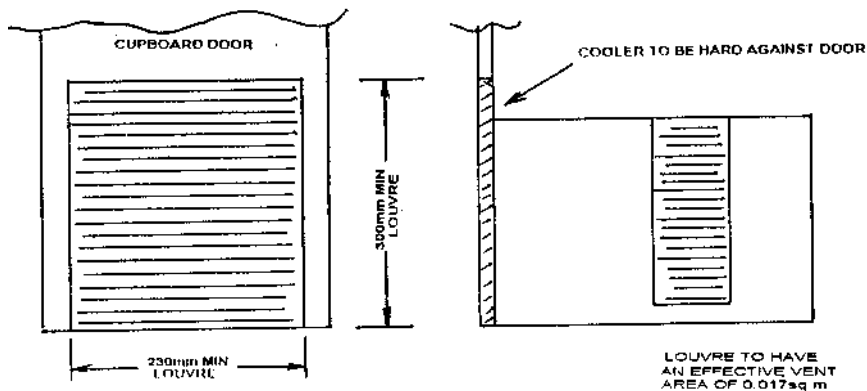

**Please note orientation of unit per affixed label on lid.**

**2) PLUMBING**

The cold water line from the unit to the tap or jug filler should be run in 6.2mm (1/4”) piping. This line must be insulated.

**Do not install unit in a cupboard along side a water heater.**

**3) FREE STANDING**

Where the unit is being installed in a free standing situation, allow 100mm of free space on all sides of the cooler, with a minimum 300mm above the unit.

**4) VENT**

After installation of pipework loosen vent screw, open mains water valve until water flows through vent. Shut water valve, tighten vent screw, reopen water valve, test water outlet valve, check for leaks, plug in mains power, switch on system.

**5) OPTIONAL EXTRAS**

- Glass filler.....Pt No: Z-3019  
(including fittings and dress washer)
- 1 metre insulation.....Pt No: Z-6052